


WINDOWS 10

- 1 Swipe in from the right edge of the screen, or click on the **Action Center** icon
- 2 Select **Connect**.
- 3 Choose the ScreenBeam receiver name as it appears on the TV's **Ready to Connect** screen.
- 4 You might be required to enter a PIN. (Default: 12345670)

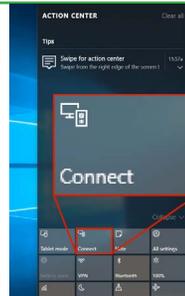

Note: The PIN is provided either on the TV screen or in the product installation guide.

You can also manually disconnect from ScreenBeam:

- Swipe in from the right edge of the screen or click on the **Action Center** icon
- Select **Connect**, then select **Disconnect** on current active connection

WINDOWS 8.1

- 1 Swipe in from the right edge of the screen, then select **Devices**.
- 2 Select **Project**.
- 3 Select **Add a Wireless Display**.
- 4 Choose the ScreenBeam receiver name as it appears on the TV's **Ready to Connect** screen.
- 5 You might be required to enter a PIN. (Default: 12345670)



Note: The PIN is provided either on the TV screen or in the product installation guide.

You can also manually disconnect from ScreenBeam:

- Swipe in from the right edge of the screen, and then select **Devices**
- Select **Project**, then select **Disconnect** on current active connection

ANDROID 5.0+

- 1 Select **Settings**.
- 2 Select **Display**.
- 3 Select **Cast screen**.
- 4 Choose the ScreenBeam receiver name as it appears on the TV display.
- 5 You might be required to enter a PIN. (Default: 12345670)



Note: The PIN is provided either on the TV screen or in the product installation guide.

You can also manually disconnect from ScreenBeam:

- Swipe in from the right edge of the screen, and then select **Devices**
- Select **Project**, then select **Disconnect** on current active connection

WINDOWS 7 OR 8

- 1 Verify the Actiontec USB Transmitter software is installed on your laptop. You can download the software from www.actiontec.com/products/sbupdate.php.
- 2 Plug the ScreenBeam USB Transmitter into your laptop.
- 3 Double click on the **ScreenBeam Wireless Display** icon on your desktop, or launch from the Windows Search box.
- 4 Click **Add a Receiver** and then click **Connect**.
- 5 You might be required to enter a PIN. (Default: 12345670)

**ScreenBeam
USB Transmitter**

Note: The PIN is provided either on the TV screen or in the product installation guide.